ELECTRONIC DOOR LOCK

Model# VHG05

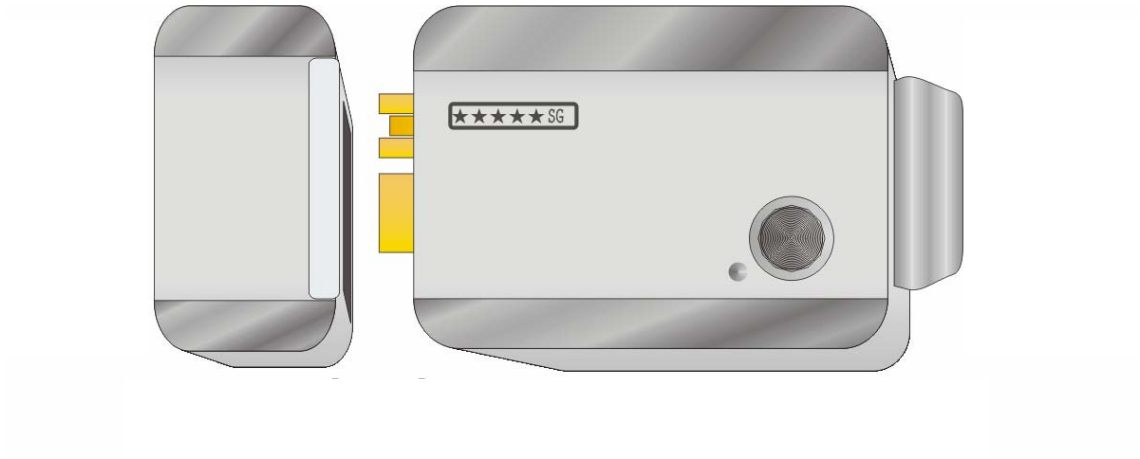

Wisecomm

HOW TO INSTALL THE ELECTRIC DOOR RELEASE LOCK

We have developed this product for WISECOMM video door phone (Model #VDP1300 and VDP1500). Before installation, figure out which side (left or right) the door hinges are installed to and then decide the direction of the door release lock (refer to Fig. 1 or 2).

(Fig 1)

(Fig 2)

- Turn two screws counter-clockwise to open the door release lock (Fig. 3).

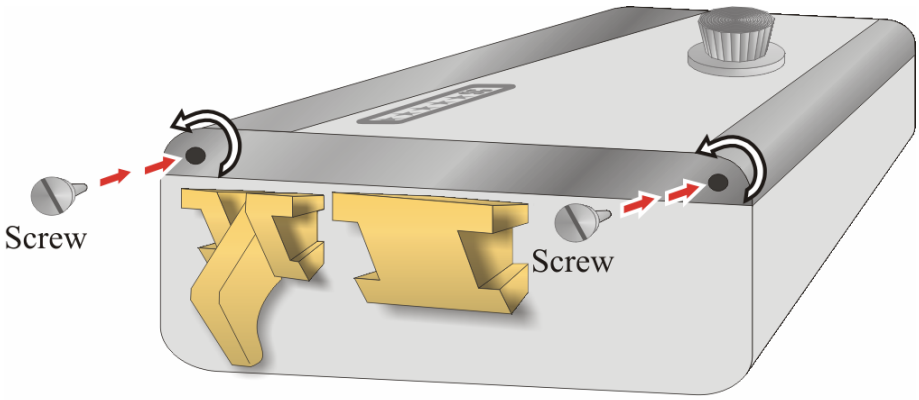

(Fig. 3)

- Install the door release lock on the door and door strike on the doorframe respectively. They must be installed at a distance of 5 mm between them for proper operation (Fig. 4).

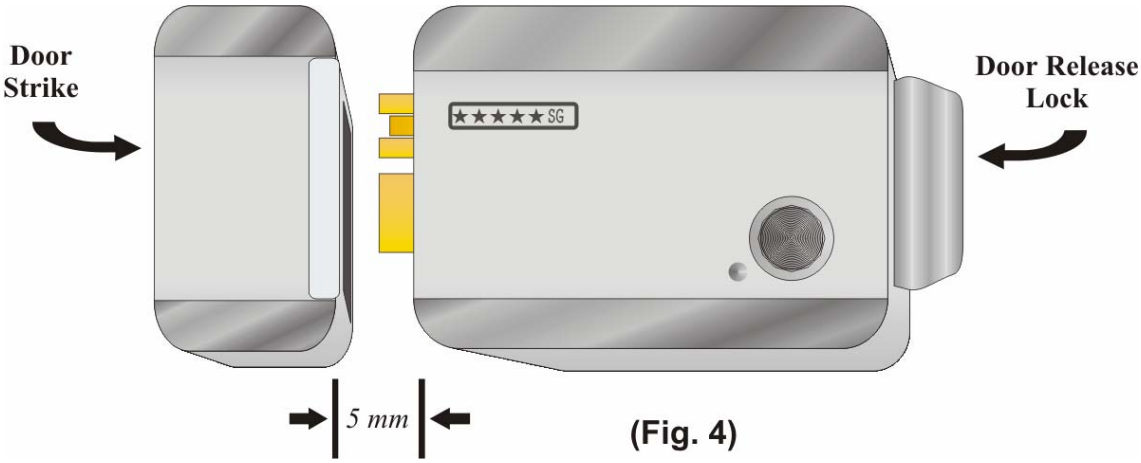

(Fig. 4)

- If it makes a strong noise or does not lock when you close the door, you can fix it with turning the adjusting bolt in Fig. 5 clockwise or counter-clockwise.

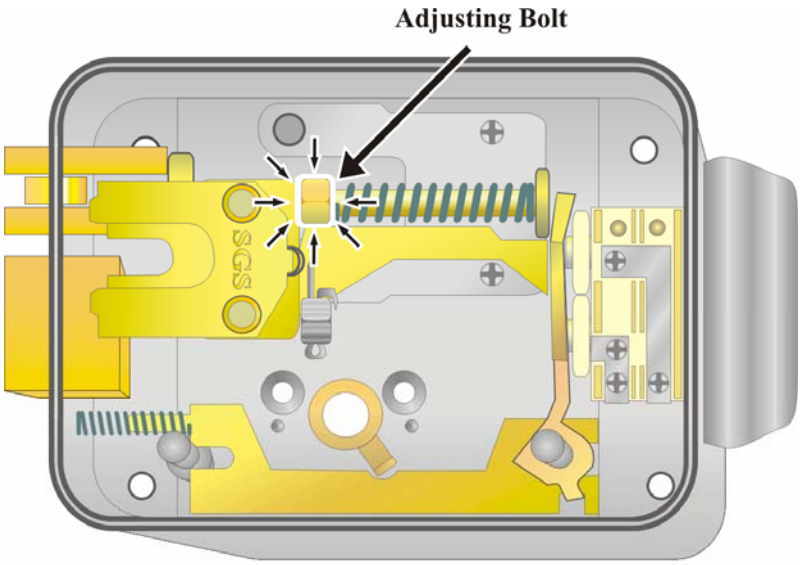

(Fig. 5)

- VDP1300 (B/W video door phone)
  Connect two wires (non-polarity) to the terminal block L+ and L- on the rear side of monitor with proper thickness and length of wires (not supplied).
- VDP1500 (color video door phone)
  Connect two wires (non-polarity) to the supplied pick-tail, which comes with color video door phone (not supplied the wires for connection).

OPERATION

Press the door release button on the monitor for about 1 second.

- **Do not press the button in excess of 8 seconds as this can result in damage on the door release lock.**
- **Note that the door release is operational when using the camera.**